



ESTUDIO 6

MINI MULTI-FORMAT VIDEO SWITCHER

USING THE UNIT SAFELY

Before using this unit, please read below warning and precautions which provide important information concerning the proper operation of the unit. Besides, to assure that you have gained a good grasp of every feature of your new unit, read below manual. This manual should be saved and kept on hand for further convenient reference.



Warning And Cautions

- ※ To avoid falling or damage, please do not place this unit on an unstable cart, stand, or table.
- ※ Operate unit only on the specified supply voltage.
- ※ Disconnect power cord by connector only. Do not pull on cable portion.
- ※ Do not place or drop heavy or sharp-edged objects on power cord. A damaged cord can cause fire or electrical shock hazards. Regularly check power cord for excessive wear or damage to avoid possible fire / electrical hazards.
- ※ Ensure unit is properly grounded at all times to prevent electrical shock hazard.
- ※ Do not operate unit in hazardous or potentially explosive atmospheres. Doing so could result in fire, explosion, or other dangerous results.
- ※ Do not use this unit in or near water.
- ※ Do not allow liquids, metal pieces, or other foreign materials to enter the unit.
- ※ Handle with care to avoid shocks in transit. Shocks may cause malfunction. When you need to transport the unit, use the original packing materials or alternate adequate packing.
- ※ Do not remove covers, panels, casing, or access circuitry with power applied to the unit! Turn power off and disconnect power cord prior to removal. Internal servicing / adjustment of unit should only be performed by qualified personnel.
- ※ Turn off the unit if an abnormality or malfunction occurs. Disconnect everything before moving the unit.

Note: due to constant effort to improve products and product features, specifications may change without notice.

CONTENTS

1. BRIEF INTRODUCTION	1
1.1. Overview.....	1
1.2. Main Features.....	1
2. INTERFACES	2
2.1. Rear Interfaces	2
2.2. Tally PIN Definition	2
3. SPECIFICATION	3
4. FRONT CONTROL PANEL	4
5. MENU SETTING	5
5.1. SDI PGM/AUX and Multiview Output Format	5
5.2. Audio Setting.....	5
5.2.1. Mixing Mode	5
5.2.2. AFV Mode	5
5.3. PIP.....	6
6. MAIN MENU SETTING	6
6.1. System Settings	6
6.1.1. Language	6
6.1.2. Clock.....	6
6.1.3. Clock Time Setting	7
6.2. Network Settings	7
6.2.1. Network	7
6.2.2. NetMask	8
6.2.3. GateWay	8

1. BRIEF INTRODUCTION

1.1. Overview

NEOiD Estudio 6 is a miniature design metal housing 6-channel SDI/HDMI multi-format video switcher that allows video switching, audio mixing, and different transition effects. Inputs signal is auto-detected while for PGM output can be scaled, which can be compatible with more different equipment and more flexible. With cost effective price, it will be your perfect choice for various events production applications etc.




1.2. Main Features

- Miniature and portable design
- 6 channel inputs: 4×SDI and 2×HDMI inputs
- 1×SDI & 1×HDMI PGM outputs, 1×SDI & 1×HDMI multiview output
- 1×SDI AUX output, can be selected as PGM or PVW
- Multi-format support, Input format auto-detected and PGM outputs select-able
- T-Bar/AUTO/CUT transitions
- Mix/ Fade/ Wipe transition effects
- PIP mode size and position adjustable
- Audio mixing
- GPIO for Tally, LAN for update


2. INTERFACES

2.1. Rear Interfaces

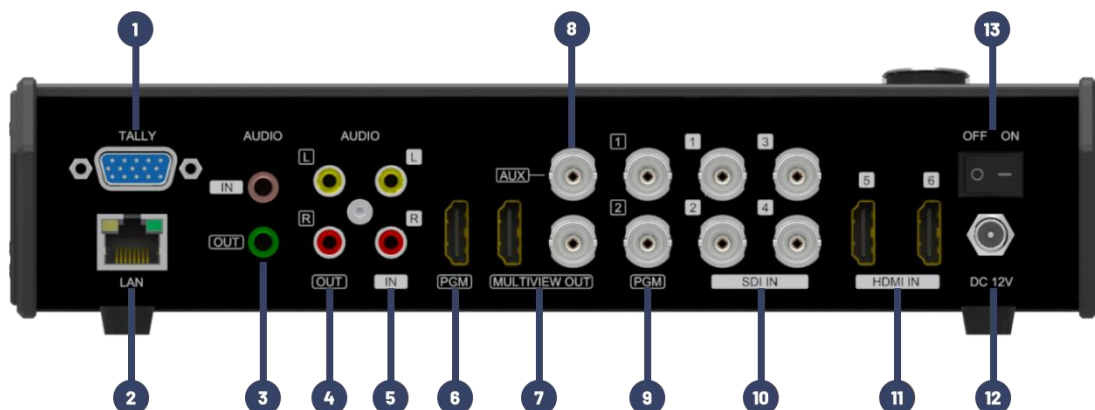

1	GPIO (for tally)
2	LAN (for update)
3	3.5mm AUDIO IN/OUT
4	AUDIO OUT
5	AUDIO IN
6	HDMI PGM OUT
7	HDMI MULTIVIEW OUT
8	SDI MULTIVIEW OUT
8	SDI AUX OUT
9	SDI PGM OUT
10	SDI IN
11	HDMI IN
12	DC 12V
13	Power Switch

2.2. Tally PIN Definition

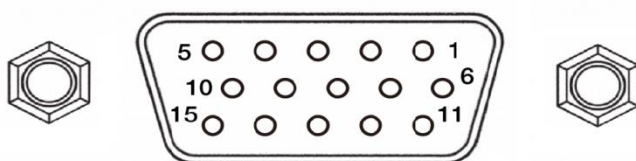



PIN	Definition	PIN	Definition
11	PGM-IN1	6	PVW-IN1
12	PGM-IN2	7	PVW-IN2
13	PGM-IN3	8	PVW-IN3
14	PGM-IN4	9	PVW-IN4
15	PGM-IN5	10	PVW-IN5
3	PGM-IN6	4	PVW-IN6
5	GND		

3. SPECIFICATION

Inputs	Video Inputs	SDI×4, HDMI×2
	SDI Input Format	1080p 60/59.94/50/30/29.97/25/24/23.98 1080psF 30/29.97/25/24/23.98 1080i 60/59.94/50 720p 60/59.94/50/30/29.97/25/24/23.98 625i 50 PAL, 525i 59.94 NTSC
	HDMI Input Format	1080p 60/59.94/50/30/29.97/25/24/23.98/23.976 1080i 50/59.94/60 720p 60/59.94/50/30/29.97/25/24/23.98 576i 50, 576p 50
	SDI Video Rate	Auto detection, SD/HD/3G-SDI
	SDI Compliance	SMPTE 259M/ SMPTE 292M/ SMPTE 424M
	Color Space and Precision	SDI: YUV 4:2:2, 10-bit; HDMI: RGB 444 8/10/12bit; YUV 444 8/10/12bit; YUV 422 8/10/12bit
Outputs	PGM Outputs	2×HD/3G-SDI; 1×HDMI Type A
	PGM Output Format	1080p 60/50/30/25/24 1080i 50/60
	Multiview Output	1×HD/3G-SDI; 1×HDMI Type A
	Multiview Output Format	1080p 60
Audio	Audio Input	1×3.5mm Stereo audio; 1×RCA(L/R)
	Audio Output	1×RCA(L/R); 3.5mm 1× Stere audio
Others	GPIO	Tally
	LAN	RJ45
	Power	DC 12V. 2.75A
	Consumption	<33W
	Operation Temperature	-20°C~60°C
	Storage Temperature	-30°C~70°C
	Operation Humidity	20%~70%RH
	Dimension	375×271.5×43.7mm
	Weight	1kg
	Warranty	2 Year Limited
Accessories	Accessories	1×Power Supply (DC12V 5A),

FRONT CONTROL PANEL

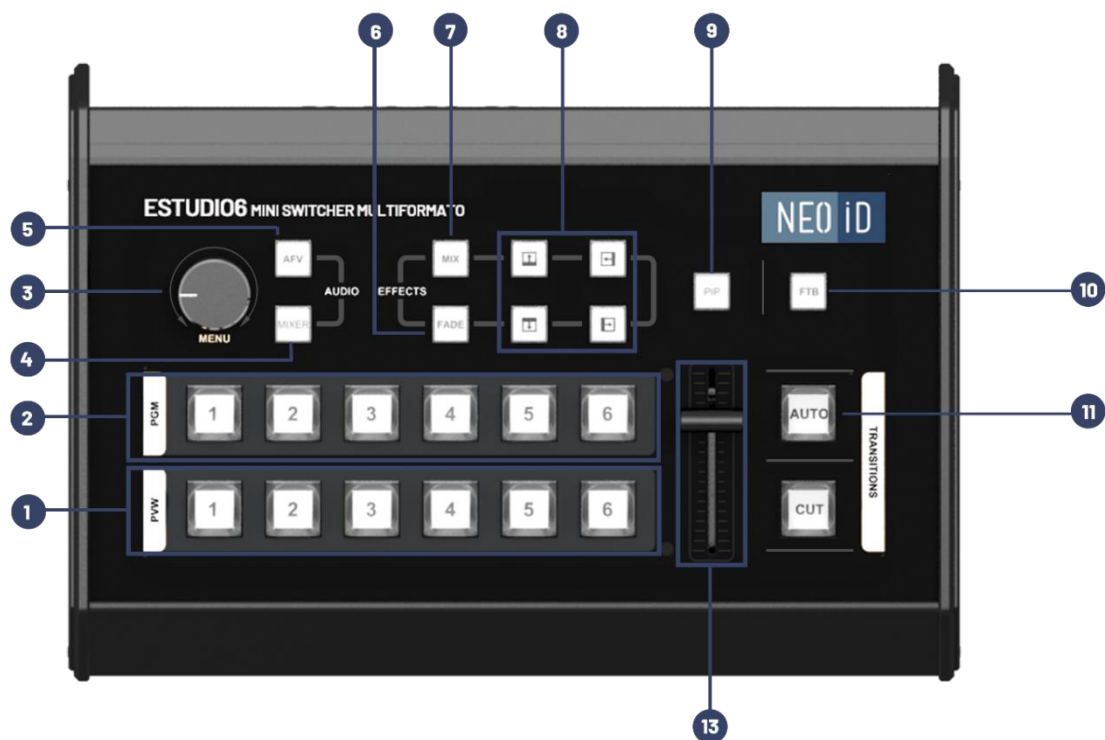

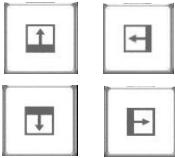1	PVW:1-6	Selecting the signal source for Preview.
2	PGM:1-6	Selecting the signal source for Program
3	MENU	Menu Setting
4	MIXER	Support 2-ch audio mixing
5	AFV	Audio follow video mode
6	FADE	Fade transition effect
7	MIX	Mix transition effect
8		Wipe transition effect
9	PIP	Picture in Picture
10	FTB	Fade to Black, used for emergency condition
11	AUTO	Performs an automated switch between Program and Preview.
12	CUT	Performs a simple immediate switch between Program and Preview.

13	T-bar	T-bar Manual Transition
----	-------	-------------------------

4. MENU SETTING

4.1. SDI PGM/AUX and Multiview Output Format

The output format of multiview is fixed at 1080p60, and for PGM output can be set by the knob. Except PVW and PGM output, there is a AUX for choice, you can quickly select the auxiliary output between PVW and PGM via Menu knob. It is default as PGM after reset. There are resolution 1080P50/60/30/25/24Hz, 1080I 50/60Hz selectable for SDI/HDMI PGM and AUX outputs.

STATUS	
CH1	IN1
CH2	IN2
CH1_VOL.	100
CH2_VOL.	100
AUX	PGM
Audio Mode	Mixing
PGM	1080P30

STATUS	
CH1	IN1
CH2	IN2
CH1_VOL.	100
CH2_VOL.	100
AUX	PGM
Audio Mode	Mixing
PGM	1080P30

4.2. Audio Setting

This video switcher is coming with 1 channel L/R analog audio input & output and 1 channel 3.5mm stereo audio input and output, support both audio following video mode and audio mixing mode.

4.2.1. Mixing Mode

Press button **MIXER** to set audio mode as mixing. Press menu and choose audio channel for 2channel audio mixing, each channel, users can select audio source from IN1/ IN2/ IN3/ IN4/ IN5 / IN6/ RCA IN.

STATUS	
CH1	IN1
CH2	IN2
CH1_VOL.	100
CH2_VOL.	100
AUX	PGM
Audio Mode	Mixing
PGM	1080P30

STATUS	
CH1	IN1
CH2	IN2
CH1_VOL.	100
CH2_VOL.	100
AUX	PGM
Audio Mode	Mixing
PGM	1080P30

4.2.2. AFV Mode

Press **AFV** button to enable the audio follow video mode. When the audio is in AFV mode the audio is coming from the embedded audio of Program video source. User can control the audio volume by menu knob.

STATUS	
CH1	IN1
CH2	IN2
CH1_VOL.	100
CH2_VOL.	100
AUX	PGM
Audio Mode	AFV
PGM	1080P30

4.3. PIP

Press **PIP** button the menu will enter into an interface as below image. The window size, position and border of PIP can be set from menu.

PIP	
Window	1
H Position	0
V Position	0
Size	Small
Border Enable	On
Border Width	2
Border Color	White
Exit	

5. MAIN MENU SETTING

When STATUS menu is not selected, press the MENU button to enter into main menu directly. In case one of the item is selected(see below), rotate the MENU button rotate anticlockwise to exit the choice, then press the MENU button to enter into main menu.

Main Menu
System Settings
Network Settings
Device Info
Exit


5.1. System Settings

5.1.1. Language

Entering system settings from the menu to switch the system language between English and Chinese.

5.1.2. Clock

Entering system settings from the menu to switch the real-time clock shown in Analog or Digital.

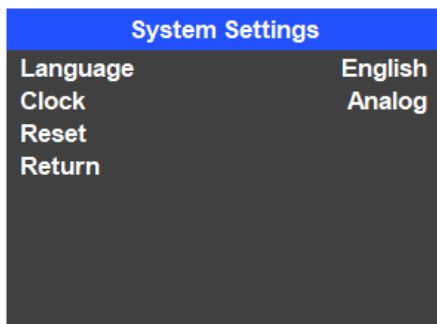

5.1.3. Clock Time Setting

Connect video switcher to a PC and download a time control software from NEOiD web site at:

<https://www.neoid.com.br/downloads>


Open the software and click Scan to search and connect the device, then the clock time will be changed to same time to the PC's time.

5.2. Network Settings

5.2.1. Network

There are two ways to acquire the IP: Dynamic(IP configured by router) and Static(set IP freely by yourself) . Select the method you need by knob menu. The default setting is Daynamic.

Dynamic: Connecting the video switcher with a router with DHCP features, then it will auto obtain an IP address automatically. Make sure that the video switcher and PC are in the same local area network.

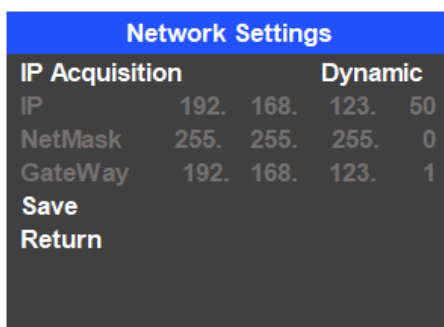

Static: Select static IP acquire method when the PC is without DHCP. Connect the video switcher with PC via network cable,set the PC's IP address to the same IP range as video switcher(the video switcher's default IP address 192.168.1.215), or set the video switcher's IP address to the same IP range as PC's IP address.

Network Settings				
IP Acquisition			Static	
IP	192.	168.	123.	50
NetMask	255.	255.	255.	0
GateWay	192.	168.	123.	1
Save				
Return				

5.2.2. NetMask

Set the NetMask. The default setting is 255.255.255.0.

5.2.3. GateWay

Set the GateWay according to current IP address.

Save the configuration when network setting finish

